
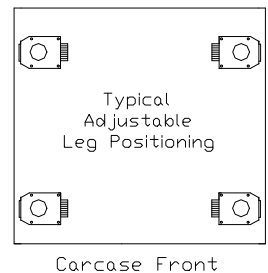


STANDFAST KITCHEN KITS

TYPICAL BASE UNIT ASSEMBLY INSTRUCTIONS USING CAM FITTINGS

1. Assemble one unit at a time as you unpack it.
2. Insert cams into cam holes in Sides, Back & Rail, with screw side facing up.
3. Lay one Side face down on a flat surface with white edging to front. Attach Back & Rail to Side by inserting cam dowels into matching holes. (Cams on the Back & Rail should be facing out, and cams on the Sides facing in.) Align parts and lock cams on each piece as you proceed by turning cam screws 180deg Now turn unit Upside Down.
4. Attach remaining opposite Side onto cams dowels and then lock those cams.
5. Attach Base onto cam dowels on both Sides & Back, and then lock those cams.
6. If using adjustable legs, screw on bases for adjustable legs as per diagram with 35mm screws provided, and insert adjustable leg
7. Now install your unit making sure it is level and square.
8. It may be necessary to plane the back fin off the carcass to get a closer fit to the wall.
9. If using a Corner Unit, make sure this is the first unit installed and work your way out from there with standard units. See separate sheet for Corner Unit Assembly.
10. Insert Shelf supports and place Shelf into position.
11. Insert hinges into Door/s and lock by turning screws ¼ turn clockwise. Screw hinge-mounting plates to cabinet and clip on doors. Attach Handle/s.

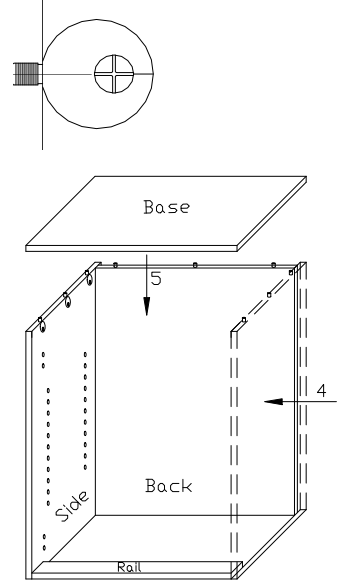

TOOLS REQUIRED

Spirit Level
Screwdriver (supplied)
Cordless drill
Jigsaw (for benchtop cut-outs)
Hole saw (for plumbing access)